

Adding Fitting To Terminal Posts

STEP 1

After concrete footings have been allowed to sufficiently harden, slip the rail end bands and tension bands onto the terminal posts. (Refer to parts list for the description and quantity of fittings that are required for various post types and heights.) The long flat surface of the tension band should face toward the outside of the fence (Fig 5).
NOTE: Take care not to spread or distort the fittings.

STEP 2

Apply all terminal post caps.

Terraced Ground

Corner post assembly is used at point A to allow fabric to follow terraced contour of ground (Fig. 6).

Very Uneven Ground

Corner post assembly is used at points A and B when ground rises or drops more than 15" per 100 linear feet (Fig. 7).

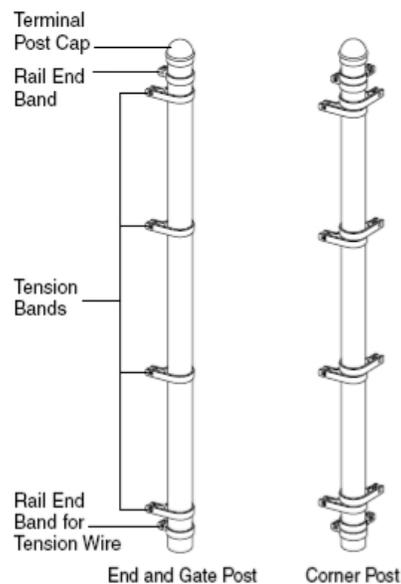


Figure 5

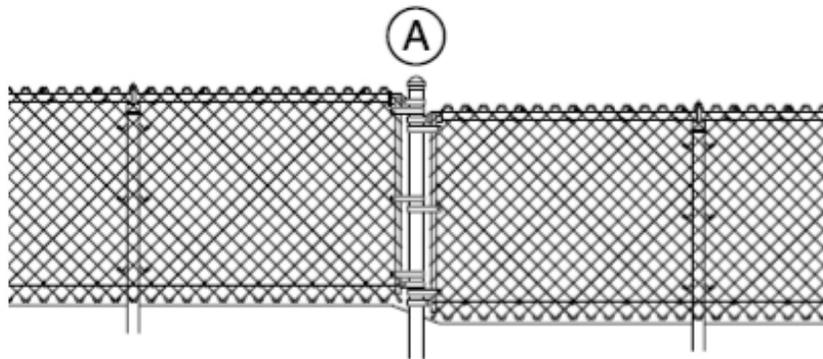


Figure 6

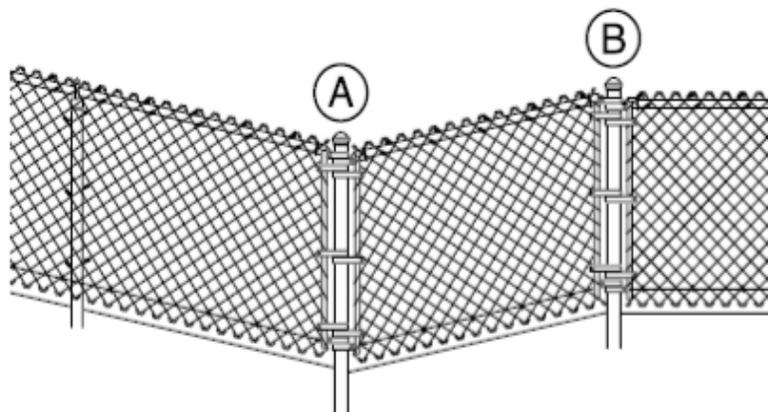


Figure 7